


How to mount Ring-Light and Polarization Filter on HD camera


Polarization Filter kit contains two parts. Part 1 “polarizes” the emitted light from illumination LEDs and Part 2 “analyses” which is inserted in the optical path the light into the camera.



1. Put the Polarization Filter part 2 inside the Ring-Light before mounting the Ring-Light on the camera, see image below.

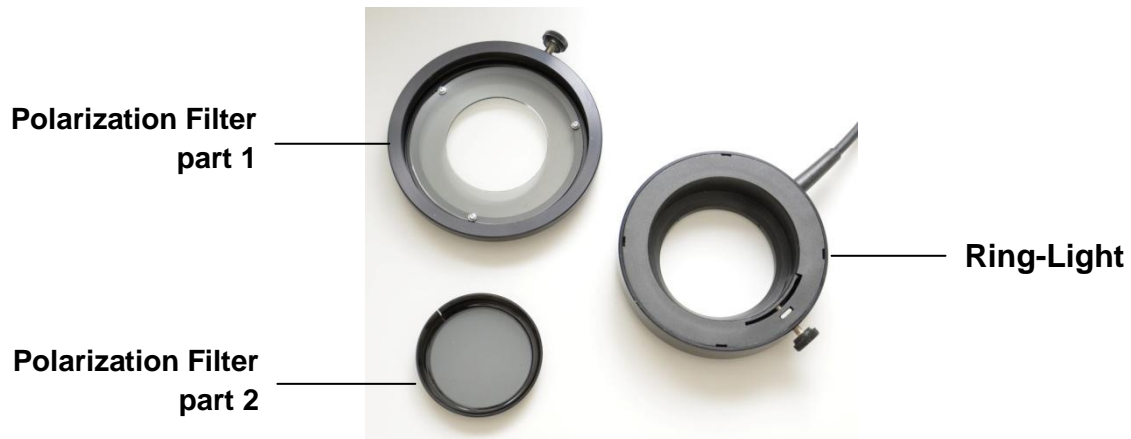

2. Mount the Ring-Light on the camera head according to the left image below. Fasten the Ring-Light with the knob. Mount the Polarization Filter on the Ring-Light according to the right image and fasten it with the knob.

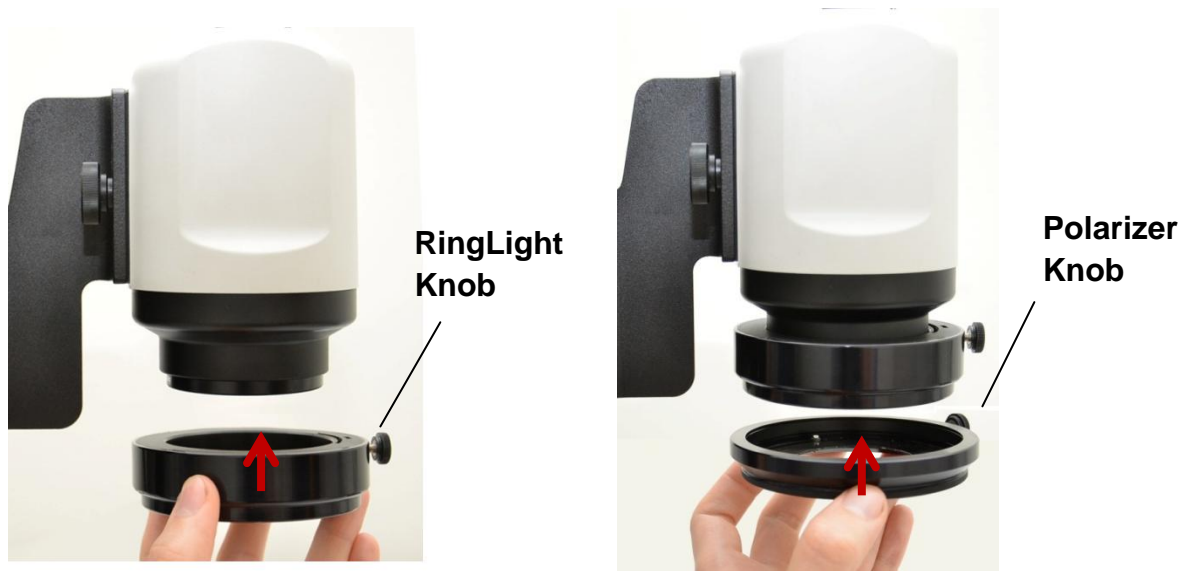

3. Direction of Polarization Filter 1 can be adjusted by turning the Rotational Ring, below picture.

